

PERPETUAL CALENDAR KIT



SOME NOTES BEFORE YOU BEGIN:

WHEN SANDING, USE FINE GRIT PAPER (180/220), AND SAND WITH THE GRAIN USING A SANDING BLOCK WHENEVER POSSIBLE. A SANDING BLOCK CAN BE AS SIMPLE AS A PIECE OF SCRAP WOOD WITH SANDPAPER WRAPPED AROUND IT. SAND JUST ENOUGH TO REMOVE ANY BLEMISHES, BEING CAREFUL NOT TO REMOVE ANY LASER ETCHED MARKS.

“DRY FIT” PARTS BEFORE GLUING, TO ENSURE THEY SLIDE TOGETHER EASILY AND FIT SNUGLY. USE SANDPAPER TO REMOVE ANY SHARP OR ROUGH EDGES AND TO ADJUST THE FIT OF CONNECTING PARTS.

THE DECORATIVE DARK EDGES LEFT BY THE LASER CUTTING PROCESS DON'T BOND WELL WITH GLUE. WHEREVER THE PARTS ARE GLUED, LIGHTLY SAND THE EDGES TO EXPOSE THE WOOD BENEATH TO ENSURE A STRONG JOINT.

USE A QUALITY PVA (POLYVINYL ACETATE) CARPENTER'S GLUE INTENDED FOR WOODWORKING. AVOID EXPANDING WATER ACTIVATED POLYURETHANE GLUES LIKE THE ORIGINAL GORILLA GLUE.

IF YOU WISH TO APPLY A FINISH TO THE CALENDAR, A COMBINATION STAIN AND POLYURETHANE PRODUCT LIKE MINWAX POLYSHADES PROVIDES EXCELLENT RESULTS. APPLY ANY FINISH AFTER ASSEMBLY, FOLLOWING THE MANUFACTURER'S INSTRUCTIONS.

Copyright ©2018 ABONG, Inc. All rights reserved.


DAMAGED OR MISSING PARTS?

email: service@abong.com


ABONG
i n c o r p o r a t e d

ASSEMBLY


PARTS LIST

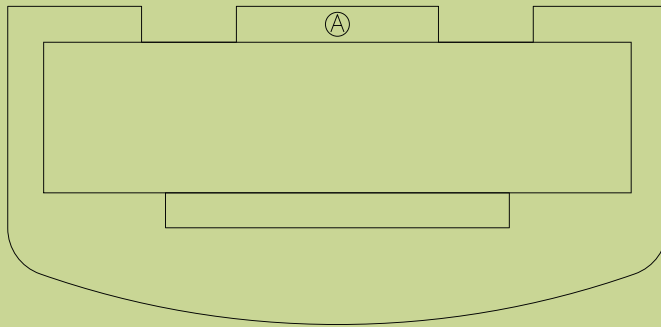


(A) BASE

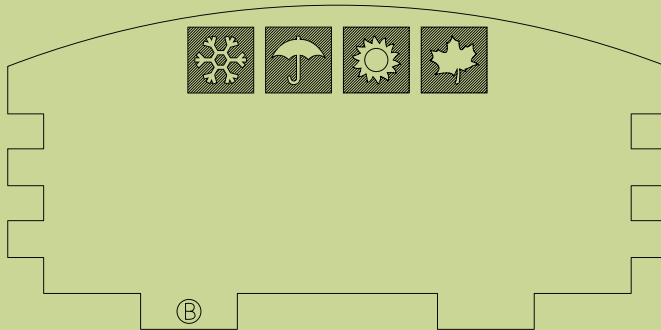

(B) BACK

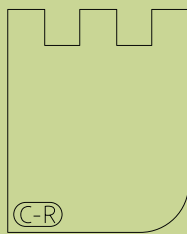


(C-R) RIGHT SIDE

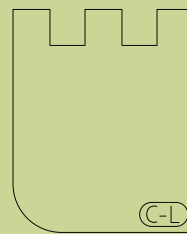

(C-L) LEFT SIDE



(D) FRONT



(E) LID



DATE DICE




WEEKDAY DIE



MONTH DIE


NOTE:

For best results, complete Steps 2-6 before the glue sets

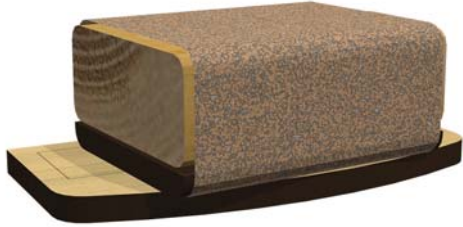

1. Use sandpaper and a sanding block (not included) to remove blemishes or rough edges from the surface of each piece. Lightly sand with the grain of the wood. Dry fit and prepare all the pieces for assembly.

2. Apply glue to the marked areas of Part B (Back), then assemble it to Part A (Base)

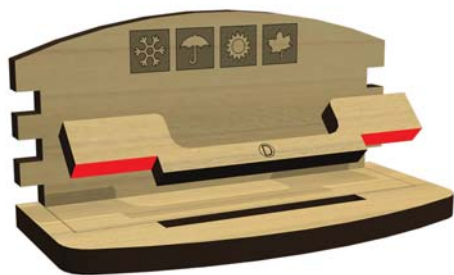

3. Apply glue to the marked areas of Part D (Front), then assemble it to Part A (Base).

4. Apply glue to the marked areas of Part C-L (Left Side), Part B (Back), and Part D (Front) as shown. Assemble Part C-L (Left Side) to the calendar base.



5. Apply glue to the marked areas of Part C-R (Right Side), Part B (Back), and Part D (Front) as shown. Assemble Part C-R (Right Side) to the calendar base.

6. Adjust any parts needed to ensure all joints are snug and even. Wipe up any excess glue. When the glue has dried, apply any stain, paint or other finish as desired to the calendar base, lid, and dice. Follow the manufacturer's directions, and allow the finish to dry thoroughly before using your new calendar.


ASSEMBLY

INSTRUCTIONS

TO SET THE DATE



1. Remove the lid and set it aside.

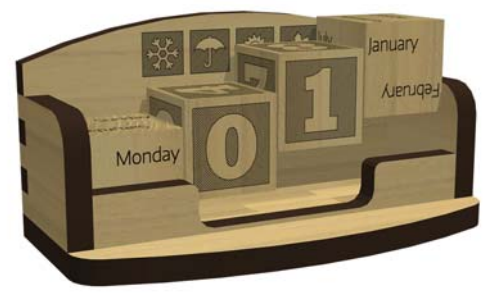


2. Remove the dice to set the current date.



3. The same face of the die is used for the numbers '6' and '9' as they are identical. Only one is used at a time.



4. The date may be arranged as Month-Date-Weekday or Weekday-Date-Month

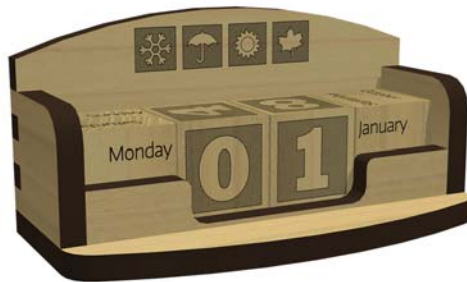

5. Replace the dice with correct date facing forward.



6. Replace the lid. Enjoy!